

IN530 - Jumper Settings

CPU speed/voltage support may be dependant upon motherboard/BIOS revision

CPU Clock	JP5	JP6	JP7	JP8
66MHz Bus				
75MHz Bus				
83MHz Bus				
90MHz Bus				
95MHz Bus				
97MHz Bus				
100MHz Bus				

CPU Multiplier	JP2 (BF0)	JP3 (BF1)	JP4 (BF2)
1.5x			
2.0x			
2.5x			
3.0x			
3.5x			
4.0x			
4.5x			
5.0x			
5.5x			

CPU Core Voltage	JP11	JP12	JP13	JP14	JP15
1.8V					
2.0V					
2.1V					
2.2V					
2.3V					
2.4V					
2.8V					
2.9V					
3.1V					
3.2V					
3.5V					