

# 6BX/VIA/ZX81

## Jumper Setting

### CMOS Clear JP7

Normal	2-3 Close (Default)
Clear CMOS	3-4 Close
External Battery	1-2 , 3-4 Close

### CPU External Frequency JP6 **On = Close** **Off = Open**

ModelRatio	JP6			
	1-2	3-4	5-6	7-8
2.0 x	On	On	On	On
2.5 x	Off	On	On	On
3.0 x	On	Off	On	On
3.5 x	Off	Off	On	On
4.0 x	On	On	Off	On
4.5 x	Off	On	Off	On
5.0 x	On	Off	Off	On
5.5 x	Off	Off	Off	On
6.0 x	On	On	On	Off