

Trinity ATX (S1598) Jumper Settings

CPU Bus Speed Settings

Bus Speed	JP4	JP5	JP6
60MHz	2-3	2-3	2-3
66MHz	1-2	2-3	2-3
75MHz	1-2	1-2	2-3
83MHz	1-2	2-3	1-2
95MHz	2-3	1-2	1-2
100MHz	1-2	1-2	1-2

CPU Clock Multiplier

Multiplier	JP1	JP2	JP3
x2.5	ON	ON	OFF
x3.0	OFF	ON	OFF
x3.5	OFF	OFF	OFF
x4.0	ON	OFF	ON
x4.5	ON	ON	ON
x5.0	OFF	ON	ON
x5.5	OFF	OFF	ON

CPU Core Voltage Settings

	1.3V	1.4V	1.5V	1.6V	1.7V	1.8V	1.9V	2.0V	2.1V	2.2V
JP8	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF
JP9	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON
JP10	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF
JP11	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	OFF
JP12	ON	ON	ON	ON	ON	ON	ON	ON	OFF	OFF

	2.3V	2.4V	2.5V	2.6V	2.7V	2.8V	2.9V	3.0V	3.1V	3.2V
JP8	ON	OFF	ON	ON	OFF	OFF	ON	OFF	ON	OFF
JP9	ON	OFF	OFF	ON	OFF	OFF	OFF	ON	ON	OFF
JP10	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	ON
JP11	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON	ON
JP12	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

	3.3V	3.4V	3.5V
JP8	ON	OFF	ON
JP9	OFF	ON	ON
JP10	ON	ON	ON
JP11	ON	ON	ON
JP12	OFF	OFF	OFF

Memory (DIMM) Clock Speed

Same As:	JP7
CPU Clock	1-2
AGP Clock	2-3

Hardware CMOS / Password Reset

	Default	Reset
JP13	1-2	2-3