

M2NPV-VM user guide update

This is an information update for the user guide that came with your motherboard package.

(Page ix)

M2NPV-VM specifications summary

Special features

ASUS Q-Fan 2
 ASUS C.P.R (CPU Parameter Recall)
 ASUS CrashFree BIOS 2
 ASUS EZ Flash 2
 ASUS O.C. Profile
 ASUS MyLogo™
 Stepless Frequency Selection (SFS) allows FSB tuning from 200 MHz to 400 MHz at 1 increment

Note: *ASUS CrashFree BIOS 2 and ASUS EZ Flash 2 only support VGA/RGB output*

(Page 1-28)

5. CPU, Chassis, and Power Fan connectors

(4-pin CPU_FAN, 3-pin PWR_FAN, 3-pin CHA_FAN1, 3-pin CHA_FAN2)

The fan connectors support cooling fans of 350mA~740mA (8.88W max.) or a total of 1A~2.22A (26.64W max.) at +12V. Connect the fan cables to the fan connectors on the motherboard, making sure that the black wire of each cable matches the ground pin of the connector.



Do not forget to connect the fan cables to the fan connectors. Insufficient air flow inside the system may damage the motherboard components. These are not jumpers! DO NOT place jumper caps on the fan connectors.



Only CPU Fan and Chassis Fan1 support Q-Fan 2.

15G063660200